
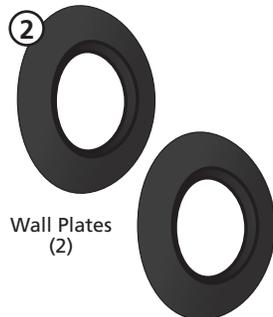
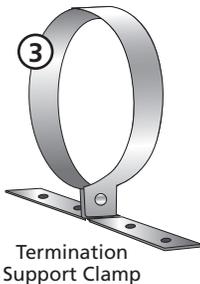
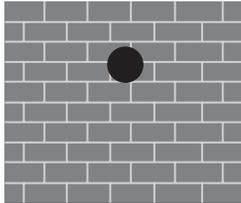
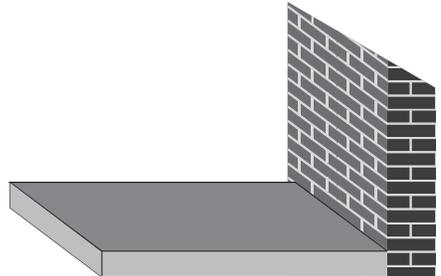
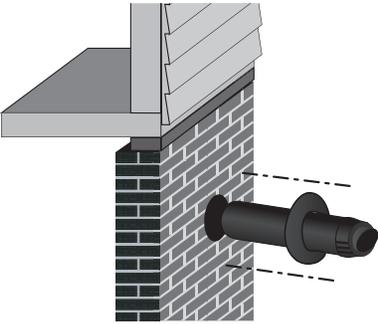
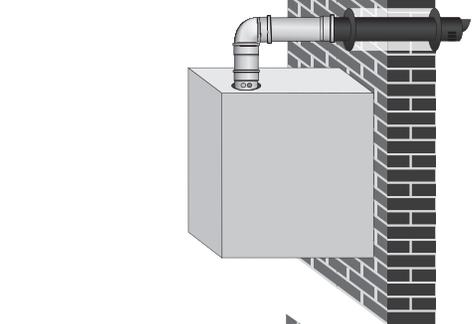
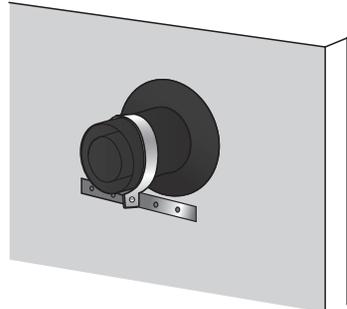
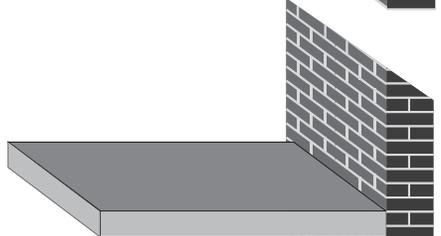
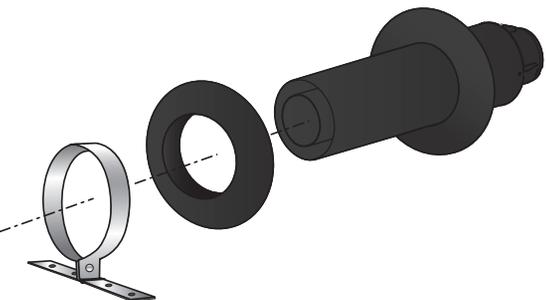


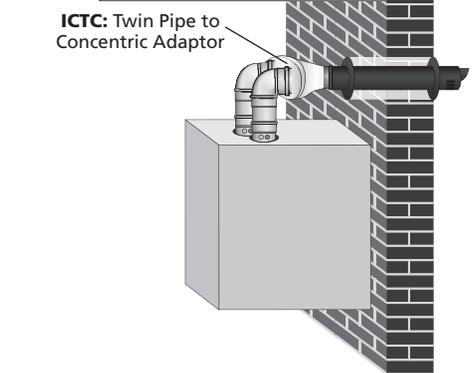

CONCENTRIC

Contents of the kit	Installation		
 <p>Concentric Wall Termination</p>  <p>Wall Plates (2)</p>  <p>Termination Support Clamp</p>	<p>1</p> <ul style="list-style-type: none"> • Locate terminator per local code. • Mark Position on wall. • Use hole saw to cut hole in exterior structure. 		
	<p>2</p> <p>Slide exterior Wall Plate (2) onto Termination (1). Insert Termination through wall from exterior.</p>		
<h3>Installation</h3>	<p>3</p> <p>Slide interior Wall Plate (2) onto termination.</p> <p>Attach Termination Support Clamp (3) to Termination. Tighten clamp around Termination. Screw mounting bracket to wall or floor joist.</p>		
	<p>4</p> <p>Caulk space between Termination and wall. Push interior Wall Plate flush against wall.</p>		 <p>ICTC: Twin Pipe to Concentric Adaptor</p>
	<p>5</p> <p>Attach separate Twin Pipe to Concentric Adaptor (ICTC) to convert to twin pipe or follow concentric installation instructions for remainder of installation.</p>		