




Centrotherm
solutions beyond


InnoFlue®
Installation Instructions for Accessories

ISBS1087
ISBS1287

Commercial Base Support

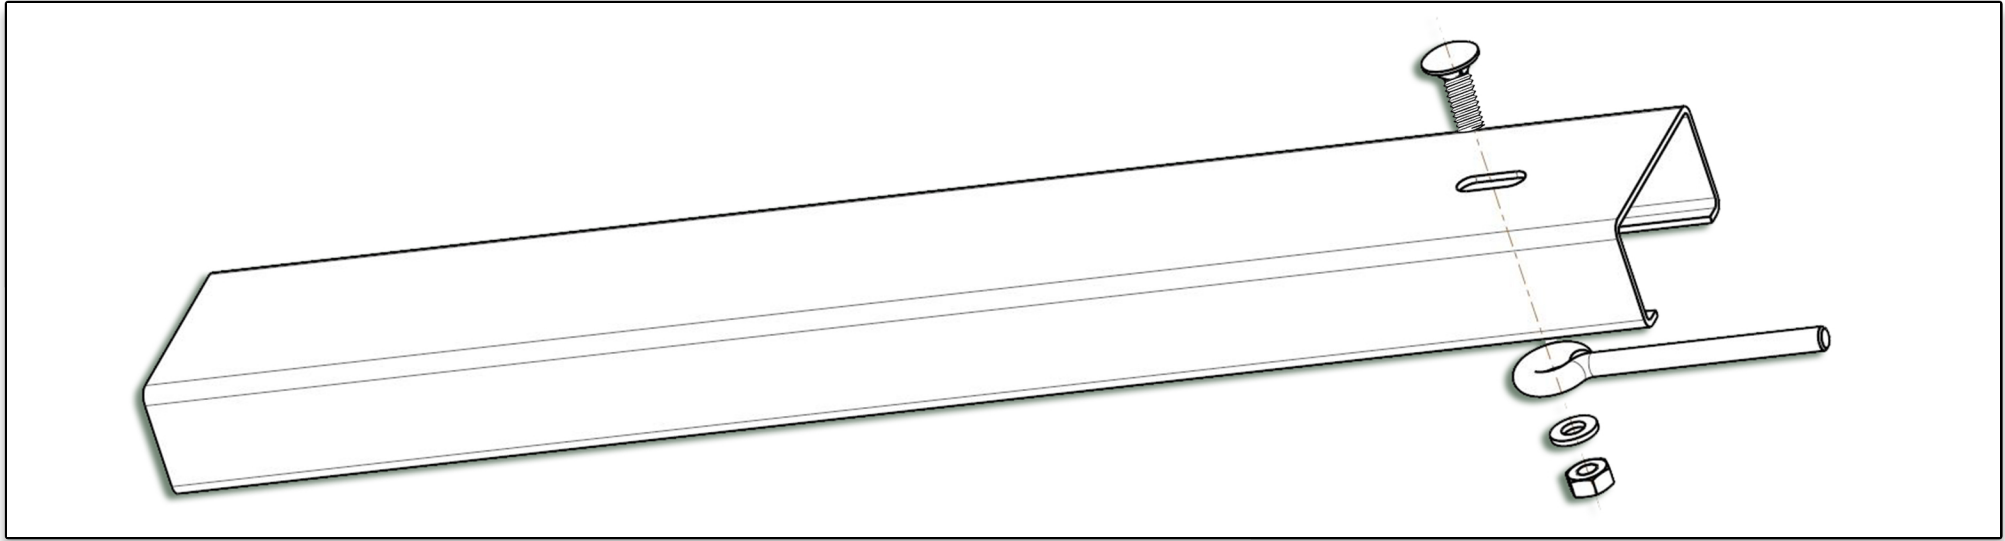

ISBS1287

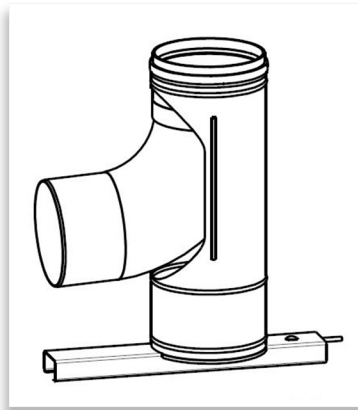

ISBS1087

1. Assemble mounting eye-bolt to support beam with included pieces (as shown).
2. Drill into back of chimney and secure mounting eye-bolt into hole.
3. Rest front of support beam on thimble.
4. Secure elbow bracket to support beam using pre-cut notches for alignment.